




- ① Remove Corner Caps before fitting two Screens together.

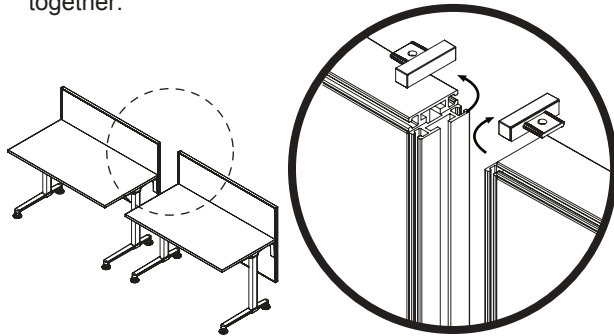


- ② Insert Hinge from top of Screens. Drive in gently with rubber hammer, if necessary.

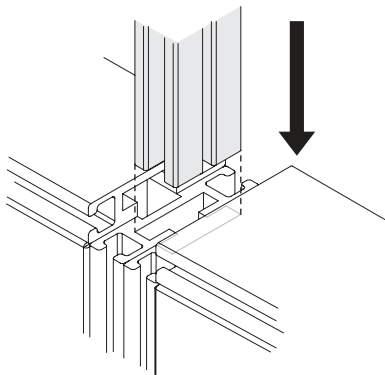


- ③ Be sure to have the Hinge up right with the hole on the top side. You will use this hole when taking Screens apart.




- ④ Insert the Inline Locking Block.

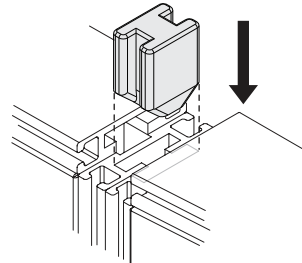


- ⑤ Insert the Inline Locking Block and reset Corner Caps on top.

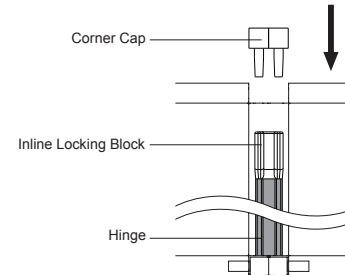

- ⑥ Hinge may need to be cut short if there are difference in height in screens.

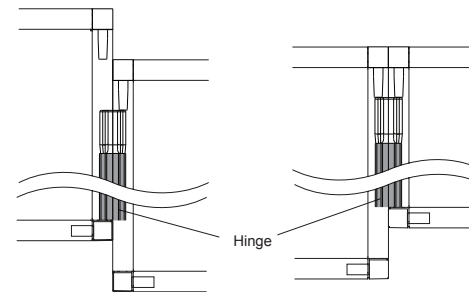


- ⑦ Hinges are able to be cut with a cutter knife. Make sure to cut opposite end to the hole.

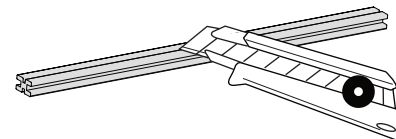


FE-3 In-line Junction (screen)

Required Tools

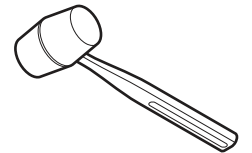

Rubber hammer

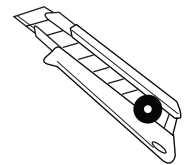

Cutter knife