



Eight (8) M8 X 25mm countersunk screws on each leg

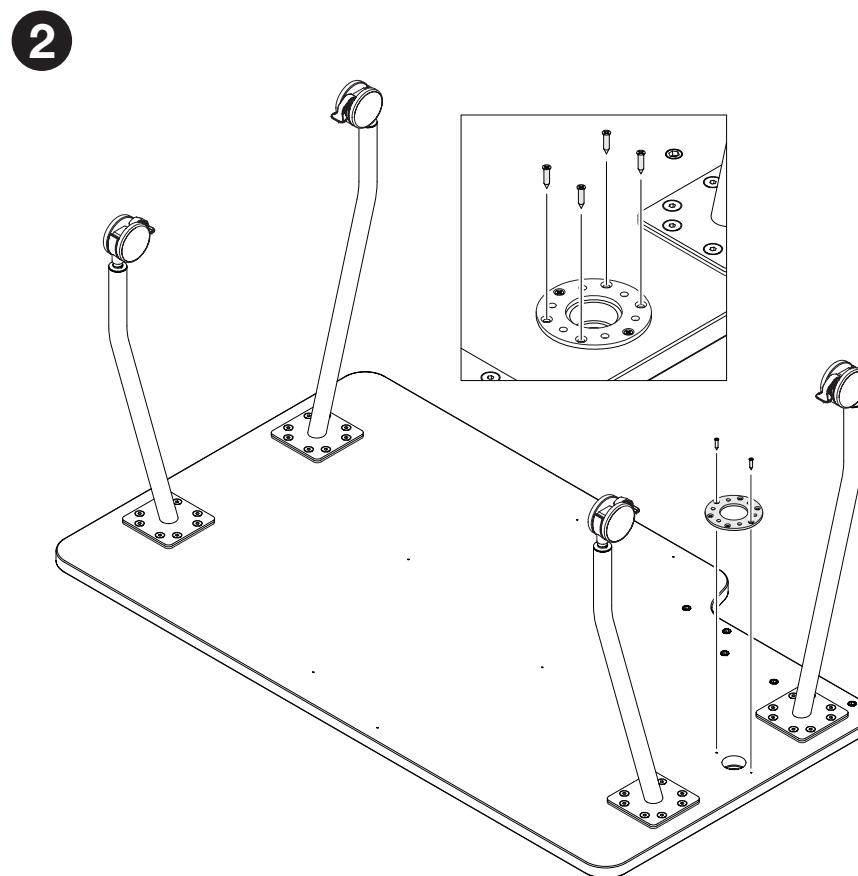


Six (6) self-tap, Ø5 X 23mm, cross, flat, nickel screws

3a

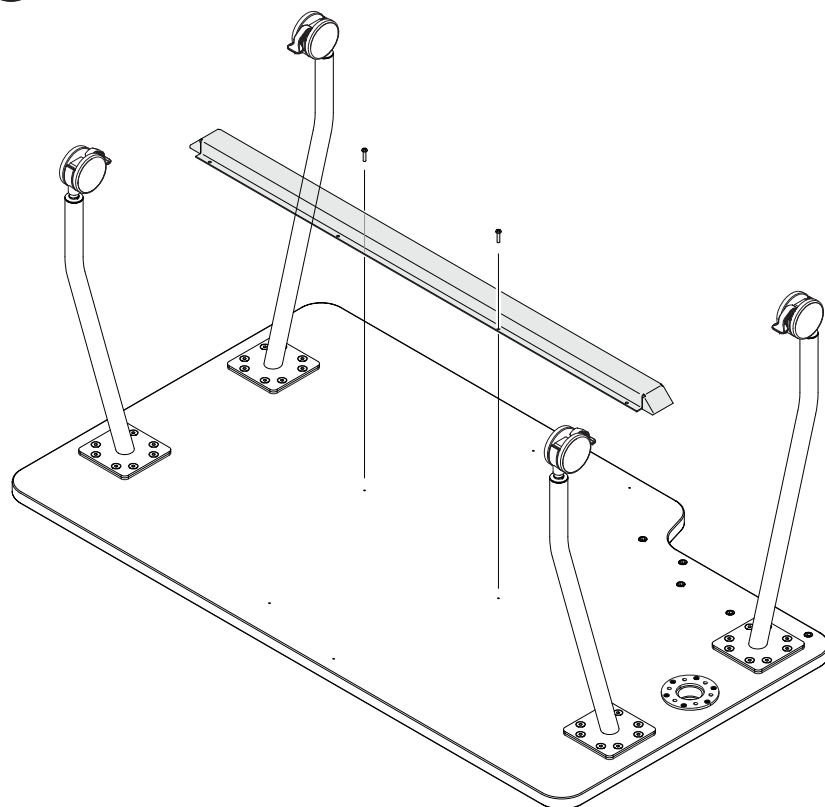


Two (2) Ø5 X 22mm wood screws

3b

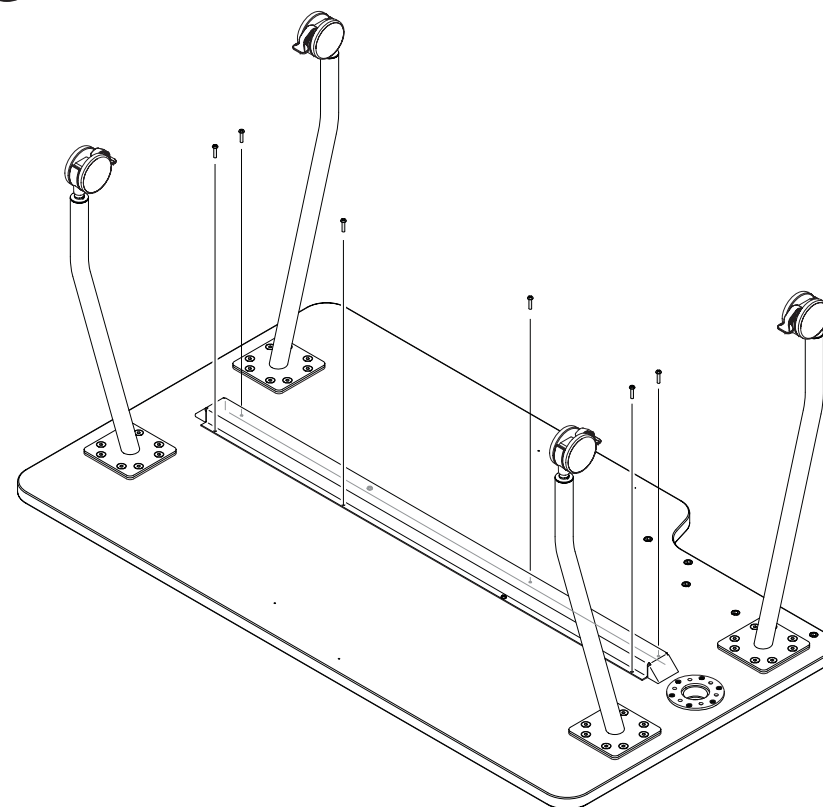


Six (6) Ø5 X 22mm wood screws

4

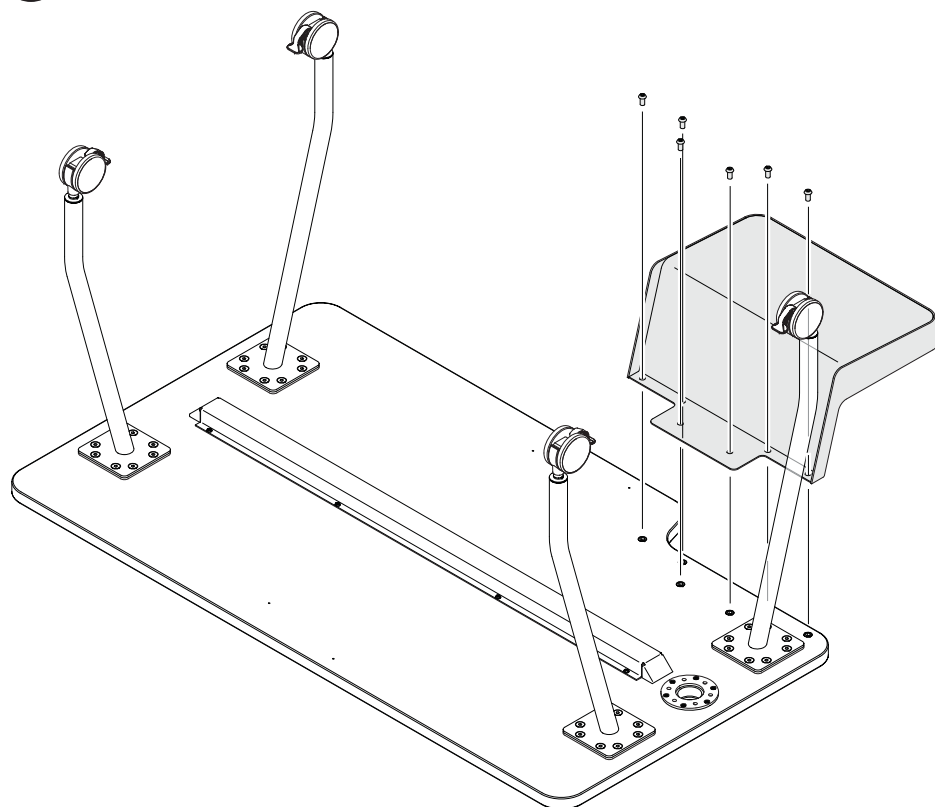


Six (6) M8 X 16, hexagon round head, black screws

5a

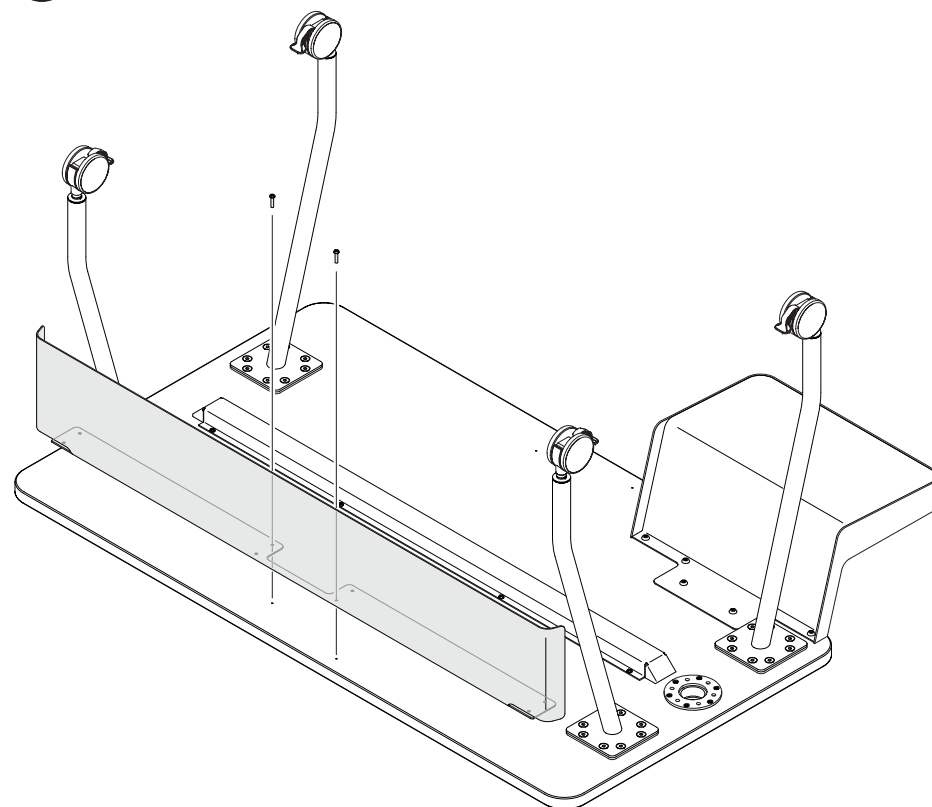


Two (2) Ø5 X 22mm wood screws

5b

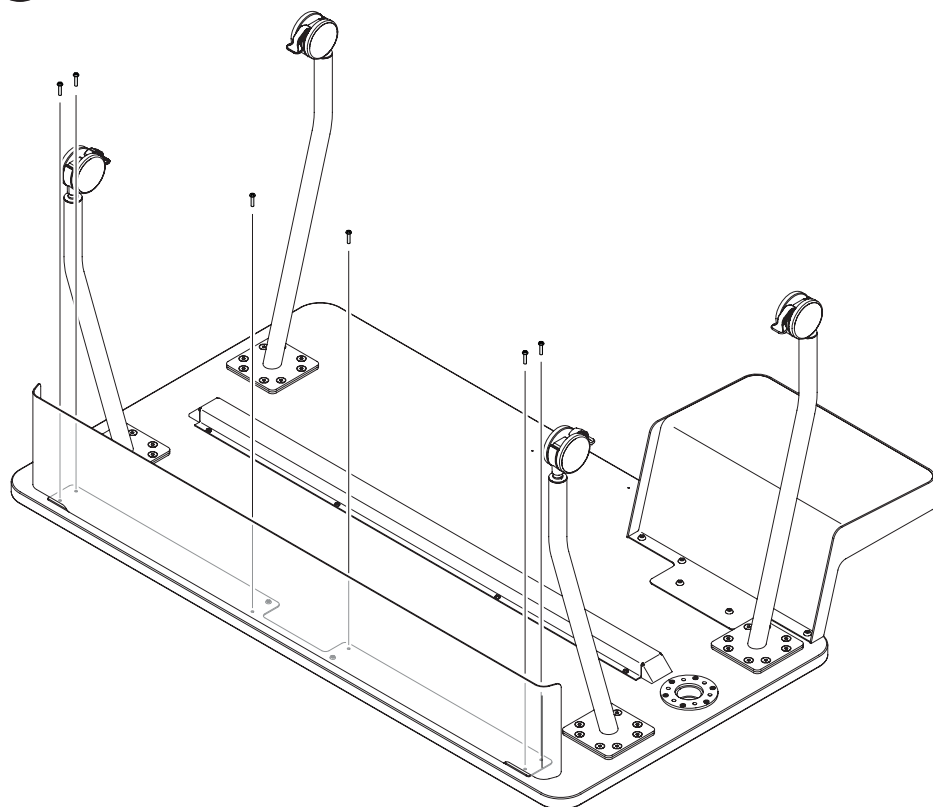


Six (6) Ø5 X 22mm wood screws

6

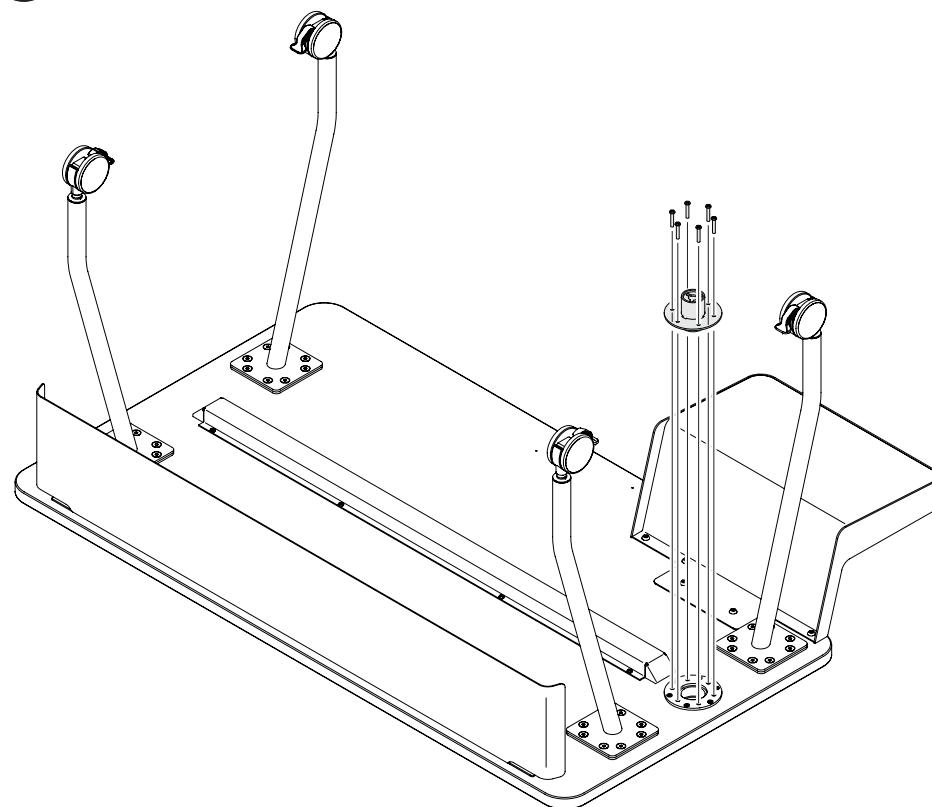


Six (6) self-tap, Ø5 X 30mm, cross, binding, black screws

7

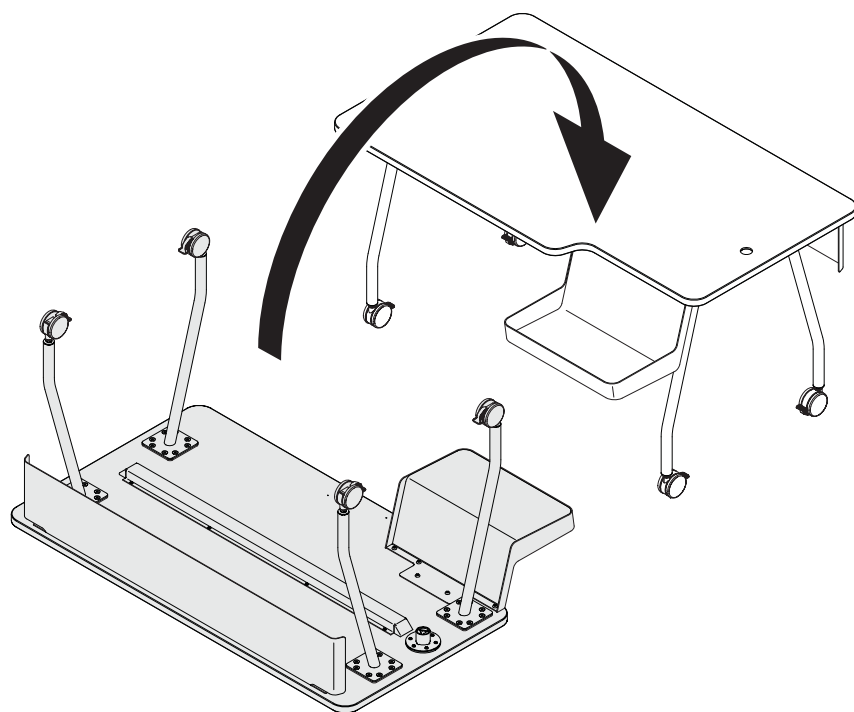

Note: Two people required.

8

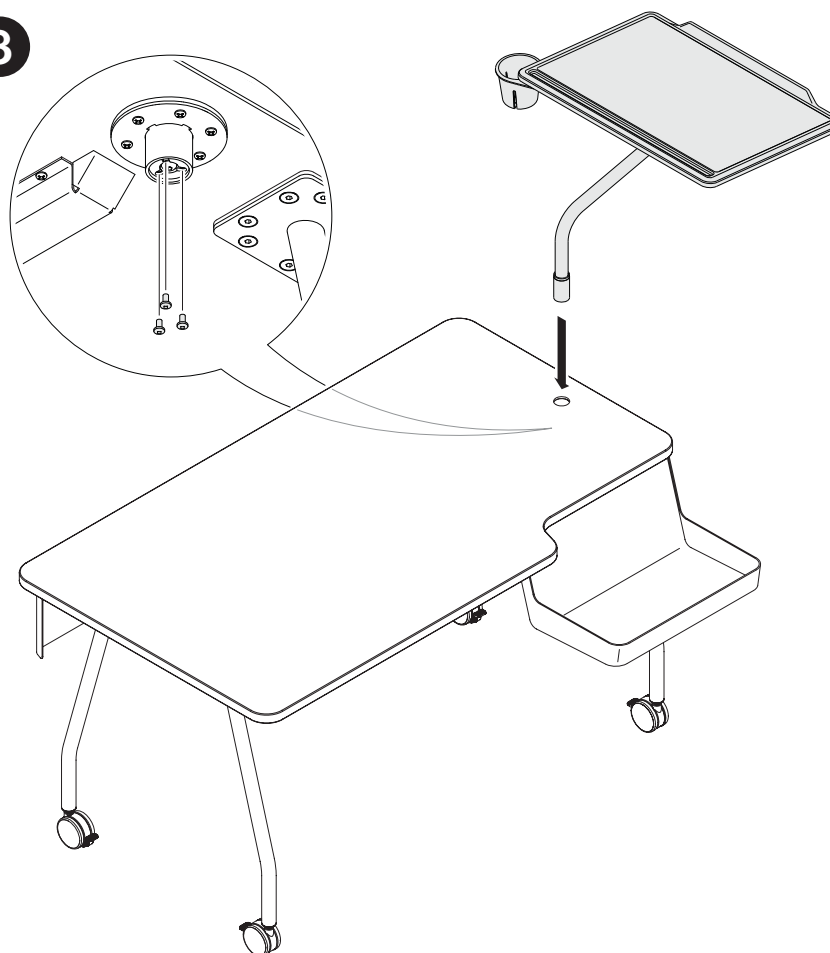

Three (3) Ø5 X 9mm wood screws