


1. Remove two (2) flat head screws, one (1) end cap and cork strips from wall track assembly.
2. Determine desired mounting height and side-to-side location of the wall track.
3. Using a level, mark a horizontal line on the wall at 1/2" below the desired top height of the wall track (3a) and 1" from ends of the desired location (3b).

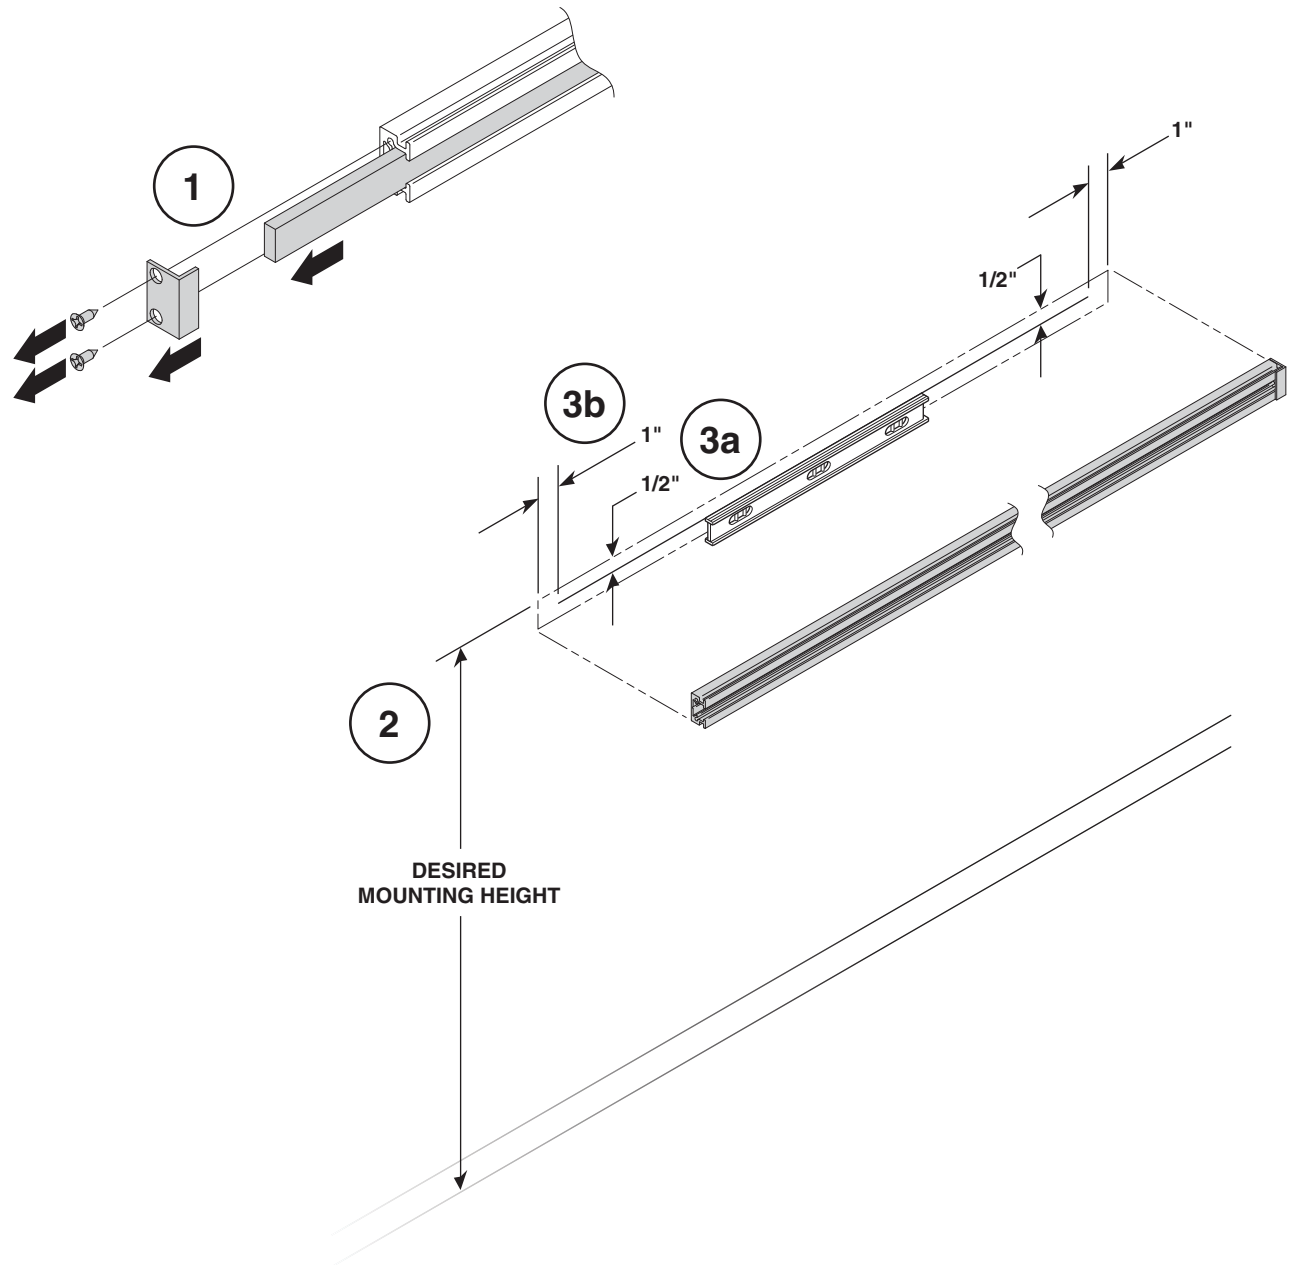

Use the following guidelines to determine proper mounting requirements particular to your type of wall construction:

Drywall or Plastered Wall


(wood or metal studs)

- If track is not secured to wood studs, secure wall track to drywall using Toggler brand type BA 3/16-24 (or rated equivalent) hollow wall anchors per manufacturers recommendations. These hollow wall anchors are not provided.
- The track can be mounted to 5/8" or thicker drywall as long as the anchors are less than 24" apart. While we recommend attaching the wall track to studs, it is not required. The anchor should have a rating equivalent to recommended anchor specified in proceeding steps.
- Wood studs must be nominal 2 x 4 construction.
- Steel studs must be at least 26 gauge or thicker.
- Studs must not exceed 24" on center (maximum).
- Wall track must be attached to a minimum of two (2) studs and no more than 24" between anchors.
- When attaching to steel studs, toggler fasteners must penetrate steel studs for best performance.
- When attaching to wood studs, secure wall track using #12 x 1-1/4" (or longer) pan head screws (not provided).

4. If attaching to a drywall stud wall, mark all stud locations. If possible, verify both edges of studs and attach to as many stud locations as possible.

4a. Mark a hole 1" inboard from end of the track.

4b. Mark all other holes 24" or less apart from each other.

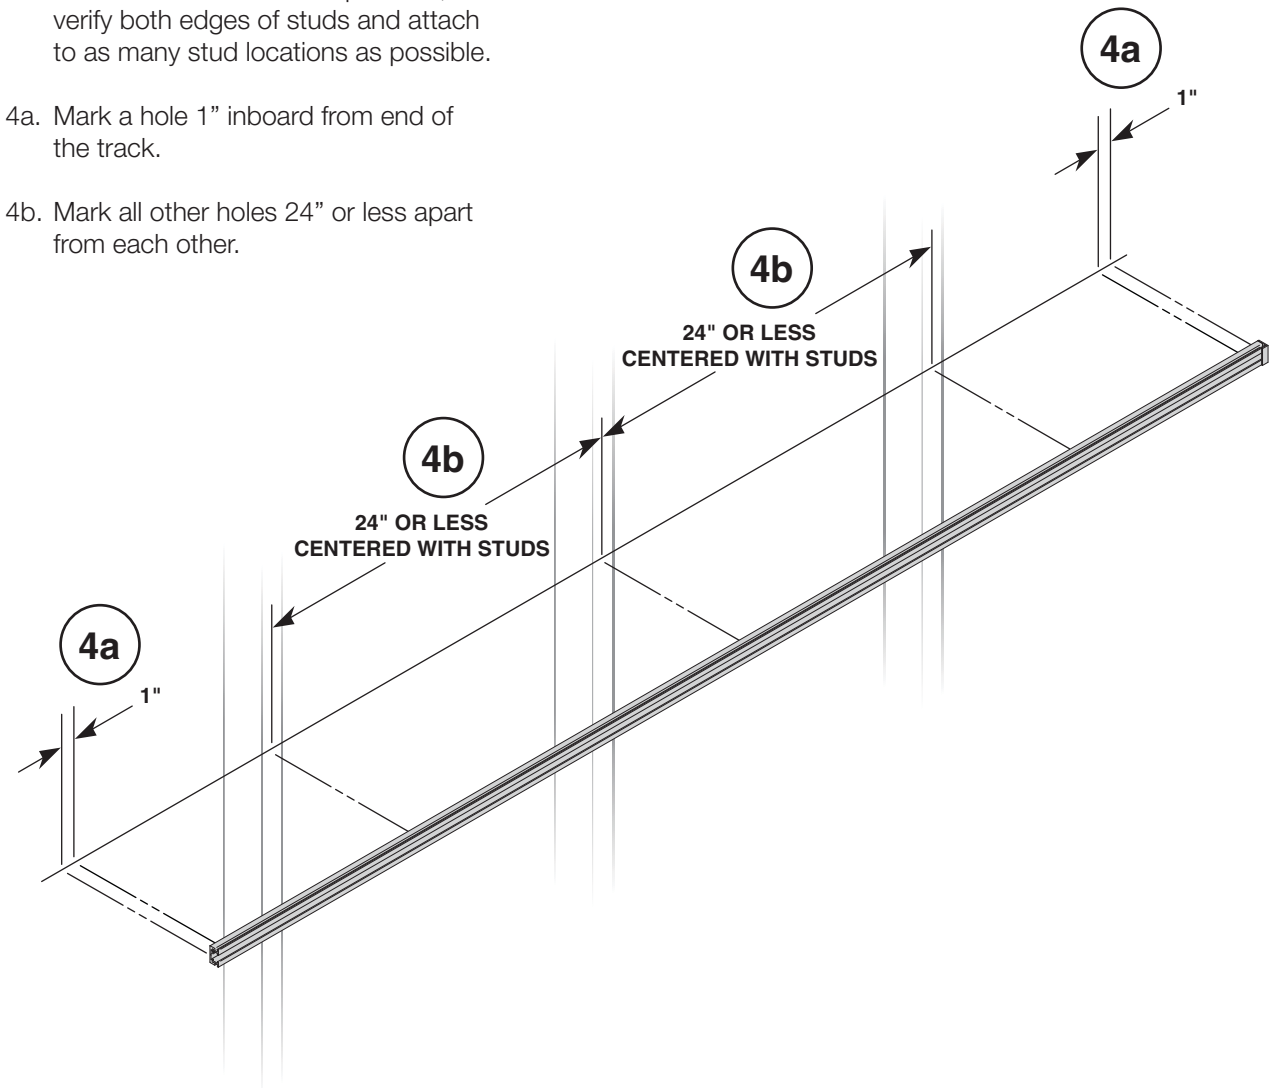

5. Drill all marked mounting hole locations every 24" or less and install wall anchors at all appropriate locations per manufacturers recommendations.
6. Install wall track to the wall using appropriate fasteners dependent on the type of anchor and/or wall material

Concrete or Block Wall Installation

7. Plastic wall anchors are recommended ("Expandet" brand or equivalent) to secure wall track to the wall. These are not provided.

Steel Wall Installation

8. Please refer to manufacturers recommendations for appropriate structural mounting locations. Punch and drill holes in wall. Secure wall track to wall using appropriate fasteners (not provided).
9. Slide wall track hooks onto wall track.
10. Re-install cork strips and end cap with two (2) flat head screws that were removed in step 1.

