



Installation Instructions

Page 1 of 2


NOTE: Illustrations shown with Underline Light

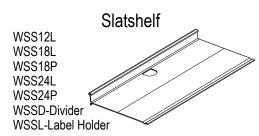

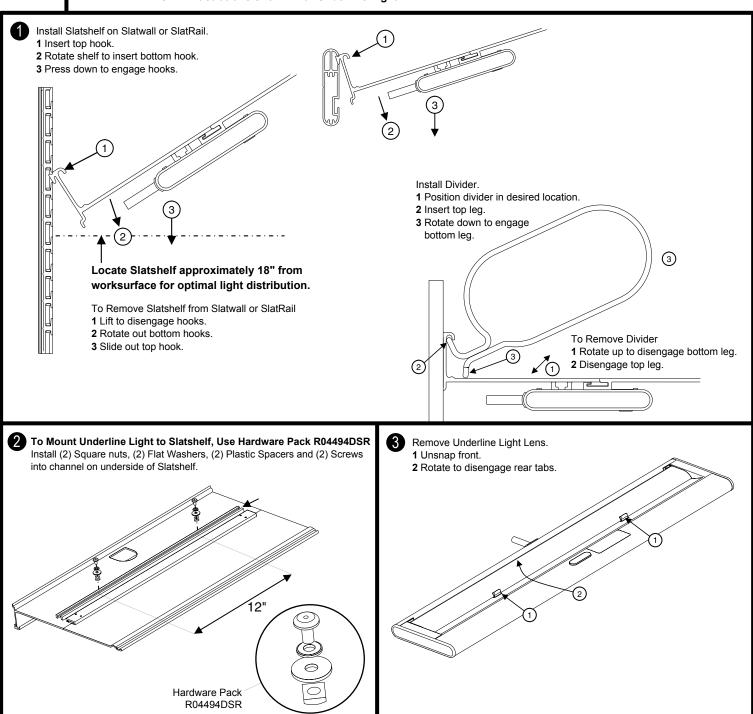


For a better day at work.[™]



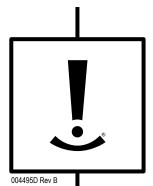


Installation Instructions

Page 2 of 2

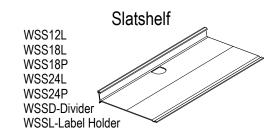


Assemble Underline Light to Slatshelf.

- 1 Place keyhole slots in Underline Light over mounting hardware.
- 2 Slide hardware into keyhole slots and tighten screws, fasten

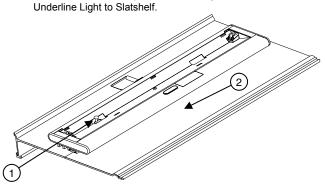

Replace Underline Light Lens and install wire management.

- 1 Engage rear tabs. Rotate forward to lock.
- 2 Install cord clips.

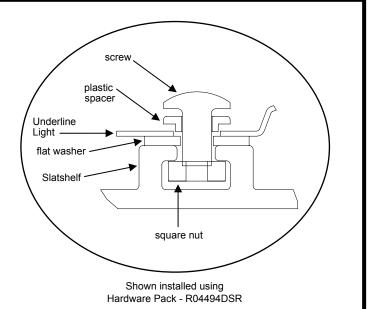




Install Label Holder and Label.

- 1 Write on label with wet erase marker only.
- 2 Insert in holder.
- 3 Engage rear of label holder in slot.

Rotate upward to snap label holder onto Slatshelf.

To Remove Label Holder, slide holder out of slot.





WARNING:

To Prevent Risk of Electrical Shock . . .

- 1 All electrical installations must be done by qualified personnel in accordance with codes and regulations applicable at the installation site.
- 2 Before beginning work, ensure that electrical power has been removed from the circuits that lights are being connected to or disconnected from.
- 3 Ensure the circuits that lights are connected to are properly grounded and are the correct voltage.
- 4 To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

For a better day at work.[™]

