Materials Needed:

- 1 30,4 cm (12") Pipe Cleaner Thread, twisted 12-15 times
- 1 Top Elastic 33 cm (13") strip
- 1 Bottom Elastic 25,4 cm (10") strip

All Sewing Done on Single Needle Juki LU-2810-7 or Equivalent

- Draw tape folding fixture needed for Operation 6 to be clamped to table
- All stitching to be run at a minimum of 7 stitches per 2,5 cm (1")

Curved Wire Hook to be inserted into drill for Operation 1A

BOM Details are available for specified materials

Masks to be laundered prior to end user to clean contents and trash

1. Twist pipe cleaner wire



1A. Fold 30,4 cm (12") pipe cleaner around drill end.



1B. Hold end and run drill 12-15 revolutions until wire end twists.



1C. Fold wire end over and crimp tight.



1D. Cut 2 elastic strips for head bands.



1E. Measure elastic to 25,4 cm (10") and cut. 2 pieces per mask.



2. First fold stitch - single needle



Flat cut fabric.



2A. Fold curved mirrored edge together (the edges without notches)



2B. Begin stitch along curved nose section with 4mm seam salvage.



2C. First stitch complete

3. Second fold stitch - single needle



3A. Fold mask inside out and fold at sewn seam.




3B. Sew over existing seam as inside out, entire curved seam at 1 cm seam.



3C. Complete.

4. Sew elastic strips on mask at notches

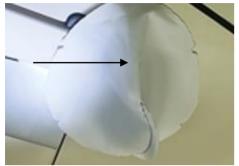

Top of mask.



4A. Align upper strap to upper notch.



4B. Sew and backtack strap to upper notch edge. 2X.



4C. Align and sew strap to opposite upper side notch.



4D. Sew and backtack strap to lower notch edges on both sides. 2 tacks per location.

5. Align drawtape and sew around perimeter



5A. Drawtape fold.



5A. Drawtape feed.



5A. Drawtape fold and drawtape feed.



5B. Align fabric edge at strap, fully inserted into drawtape fold.



5C. Sew perimeter around entire circumference.



5C. Sew perimeter around entire circumference.



5D. Sew 2,5 cm (1") extended strip off end (at startpoint) and trim.



Final.

6. Insert wire and sew ends



6A. Insert rounded wire end into tunnel.



6A. Insert rounded wire end into tunnel.



6B. Feed wire through tunnel until end is fully into tunnel – between top strap connection points.



6C. Sew across wire lead end (over the wire) to capture wire.



6D. Fold and sew open end.



6D. Fold and sew open end.



^{*} It is recommended to use social distancing, face masks and gloves during assembly.

Fabric Face Mask Pattern

